

TECHNICAL INFORMATION No.

TI 06-12 / September 2006

Fujicolor paper processing chemicals for Frontier Minilabs 340-500-550-570-590 series
FJ CP-49LR PC KIT X 2

We would like to inform you on the introduction of the FJ CP-49LR chemicals. This new version features a low replenishment rate, high processing capacity, optimum print quality on the recently introduced range of Fujicolor Crystal Archive papers targeted at high volume processing customers

1. New product:

FJ CP-49LR PC Kit x 2 Cat. no.; 995126

2. Features of the new product

- Designed for Fujicolor Crystal Archive papers
 - Fujicolor Crystal Archive paper New
 - Fujicolor Crystal Archive paper Supreme New
 - Fujicolor Crystal Archive paper Supreme Type II
 - Fujicolor Crystal Archive Digital paper Type DP II
- Reduced replenishment rate = higher processing capacity (125m² / cartridge)
- Chemical waste reduction per m² processed
- Packaging waste reduction per m² processed

3. Minimum Processing Volumes required to install FJ CP-49LR PC Kit x 2

- Minimum Processing Volumes:


	FJ CP-49E PC Kit x 2	FJ CP-49LR PC Kit x 2
Frontier 340	36 m ² / week	80 m² / week
Frontier 500	43 m ² / week	95 m² / week
Frontier 550	48 m ² / week	105 m² / week
Frontier 570	48 m ² / week	105 m² / week
Frontier 590	48 m ² / week	105 m² / week

4. Switching from FJ CP-49E Kit x 2 to FJ CP-49LR PC Kit x 2

- FJ CP-49LR can be replenished on top of FJ CP-49E chemistry.
- Replenishment rates must be changed immediately after the new product FJ CP-49LR is installed and the new replenisher mixed
- There is no need to change the processing temperature when you are already processing the recently introduced Fujicolor Crystal Archive papers.
- Processing Temperatures with last generation Fujicolor Crystal Archive Papers:

	FJ CP-49E PC Kit x 2	FJ CP-49LR PC Kit x 2
Frontier 340	42°C	42°C
Frontier 500	43°C	43°C
Frontier 550	43°C	43°C
Frontier 570	43°C	43°C
Frontier 590	43°C	43°C

5. Identification of the new product lines

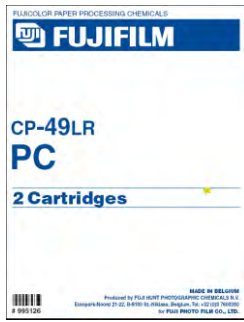

995126 FJ CP-49LR PC Kit x 2

6. FJ CP-49LR Start-up Chemicals

- FJ CP-49E Start-up chemicals must be used in combination with FJ CP-49LR PC Kit x 2.
- Start-up conditions are identical to the FJ CP-49LR PC processing conditions



992206 FJ CP-49E P1 1x 3.7L



992214 FJ CP-49E P2 1x 3.7L

7. Identification of shipment FJ CP-49LR PC Kit x 2

- Full loaded pallets will show a red sticker “NEW” .:



8. MSDS

- MSDS’s are available

9. Market availability

- FJ CP-49LR PC Kit x 2 processing chemicals will be shipped from September 2006.

If you have any questions about this issue, please do not hesitate to contact us.

Best regards,
FUJI PHOTO FILM (EUROPE) GmbH

Shigeru Hirayama

FUJI HUNT NV

Rudy Staes